



Pro-Lock Valve Lockout System

OPERATING INSTRUCTIONS


1. Use the Pro-lock with the PVC coated steel wire provided, cut to the required length.

Note: To avoid possibility of minor cuts from the potential frayed cable ends:

- a) When cutting PVC cable, be sure not to leave any protruding steel cable beyond PVC coating (Use sharp cutters).
- b) As added protection against this, it is recommended, that when securing pro-locks that protective gloves are worn.

2. Secure the object to be locked with the wire.

3. Unscrew the top of the Pro-lock far enough to enable introduction of the wire from the sides.

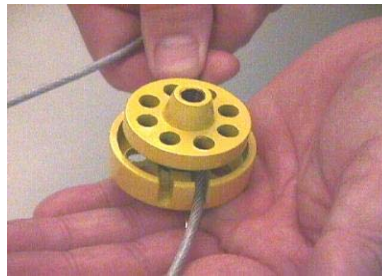

4. Slot the wire into the lock (**No threading of wire is necessary**)

5. Screw down the top, hand tight.

6. Slide the Pro-lock to the optimum position (**much like the knot of a neck tie**)

7. Hard tighten using the Operating Tool provided..

8. For added security fit padlocks or security seal, as necessary.